



INSTRUCTION MANUAL

Model ARCRG34SS

Please read this instruction manual before using your new rice cooker

The warranty repair slip is valid with the receipt of purchase, so it is recommended to keep it.

DEAR CUSTOMER

Thank you for choosing our product

The rice cooker is exceptionally easy to use and extremely efficient. After reading the instruction manual, operating the rice cooker will be easy.


Before being packaged and leaving the manufacturer, the rice cooker was thoroughly checked with regard to safety and functionality.

Before using the appliance, please read the instruction manual carefully. By following these instructions carefully you will be able to avoid any problems in using the appliance.

Contents

Parts	4
How to steam	5
Maintenance	5
Troubleshooting	7
ХЭРЭГЛЭГЧИЙН ГАРЫН АВЛАГА	8
ХҮНДЭТ ХЭРЭГЛЭГЧ ТАНАА	9
Хэрэглэх Заавар	10
Жигнүүр ашиглах заавар	11
Гэмтэл ба түүнийг оношлох	13

Parts

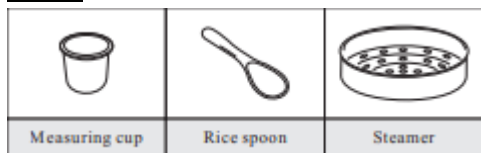

1. Open button
2. Steam vent
3. Lid
4. Dew collector
5. COOK indicator
6. WARM indicator
7. Control button



How to use

1. Measure the desired amount of rice with the measuring cup supplied with this rice cooker.

Rinse the rice several times until the water in the bowl runs clear.

Note: Do not rinse the rice in the inner pot, if the pot is used for washing the rice, the flourine-resin coating may be damaged or the bottom may deform.

2. Put the rice into the inner pot and water up to the level which corresponds to the measure of rice used.

3. Wipe the water outside the inner pot, place the pot into the cooker, turn it slightly from left to right, ensure that the pot contacts with the heating plate properly, level the rice inside the inner pot.

4. When ready to cook, connect the plug into an outlet.

5. Press the button to start cooking, keep warm indicator light will light up, if the switch button is not pushed, the

keep warm light will light up after 1-2 minutes. The rice cooker will be in keep warm stage.

6. When the cooking is finished, the switch button will pop up and click will be heard. At the same time, the

cooking indicator light will go off the keep warm light will go on.

7. Unplug the cord before serving.

How to steam

1. Pour at least 0.5L of water into inner pot, place the steamer with vegetables or other food suitable for steaming cooking in the inner pot.

2. Press the switch button start to cook and steam. Or you can cook the rice and steam the food at the same time.

3. In this case, you need to keep an eye on the time for the steaming food.

4. Be careful of the hot steam when take out the steamer of the steaming food.

Maintenance

1. Unplug before cleaning.

2. Wash the inner pot in warm and soapy water using a sponge. Rinse with water thoroughly. Then wipe dry with cloth. Do not clean with abrasive brushes.

3. Rice grains or other residue may stick on the heating plate. To ensure a proper contact with the inner pot, rub the grains/residues away from the heating plate with fine sandpaper then wipe it with cloth again.

Important Reminders

1. This rice cooker is intended for indoor use only.

2. Always keep the rice cooker unplugged when it is not in use.

3. Do not place the rice cooker on a wet or unstable surface, or next to a heat source.

4. To avoid deformation, do not put hard objects inside the pot, or heat the pot on a gas stove.

5. Do not cover the rice cooker with a cloth, this may warp or cause discoloration in the outer lid.
6. The steam vent is extremely hot when cooking.
7. Do not immerse the rice cooker and electric cord in water or liquid to prevent electric shock/problems.
8. Replacement of the power cord must be from an authorized service center.
9. Do not operate the appliance if it is damaged.
10. This appliance is intended to be used in household and similar application such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type of environment
11. The connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is use again
12. The only appropriate connector must be used.
13. This appliance is not intended to be used by persons (including children) with reduced physical, sensory, or metal capabilities, or lacks experience and knowledge about the product unless they have been given supervision or instruction concerning the proper use of the product by the person responsible of their safety.
14. Children must be supervised to ensure that they do not play with the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any hazard.
16. Never immerse the appliance in the water or other liquids to avoid damage and danger.
17. **WARNING** – Potential injury may occur from misuse of the product.
CAUTION:In order to avoid hazard due to the inadvertent resetting of the thermal cutout, this appliance must not be

supplied through an external switch device, such as a timer, or connected to a circuit that is regularly switch on and off by the utility.

Troubleshooting

Problem	Cause	Solution
Heating plate is not hot.	Rice cooker is not plugged.	Check the switch, button, outlet, fuse, cord if connected properly.
The light is off.	The lights or resistances are loose/broken.	Connect it
Heating plate is hot.	Wire connection is loose.	Plug the connection properly
	Plug the connection properly	Replace the heating plate.
The rice is half- cooked or cooking time is too long.	Inner pot is not leveled.	Turn the cooking pot until it fits the heating plate.
	Foreign object is stuck between cooking pot and heating plate	Remove any foreign object in the heating plate.
	Foreign object is stuck between cooking pot and heating plate	Replace the heating plate
The rice is cooked brown.	Switch button and its holder action are obstructed	Repair it.
	The thermostat malfunctions.	Replace the thermostat.
Does not warm automatically.	Keep warm thermostat malfunctions	Replace the thermostat.



ХЭРЭГЛЭГЧИЙН ГАРЫН АВЛАГА

Model ARCRG34SS

Хэрэглэхээс өмнө зааварчилгаатай сайн танилцана уу

Баталгаат засварын хуудас нь худалдан авсан барааны төлбөрийн баримтын хамт хүчинтэй тул анхаарч, хадгалахыг зөвлөж байна.

ХҮНДЭТ ХЭРЭГЛЭГЧ ТАНАА

Манай бүтээгдэхүүнийг сонгосон танд баярлалаа.

Бүтээгдэхүүнээс авах сэтгэл ханамжийг нэмэгдүүлэх, хэрэглэгчийн аюулгүй байдал болон бүтээгдэхүүний зөв хэрэглээ, гарч болзошгүй эвдрэл гэмтлийг засварлах талаарх мэдээллийг бүтээгдэхүүн суурилуулж угсрахаас өмнө гарын авлагаас уншиж танилцан, гарын авлагыг цаашдын хэрэглээнд зориулан хадгална уу.

Бүтээгдэхүүний хэрэглэхэд хялбар, хөнгөн байдал, авсаархан загвар, дизайн зэрэг давуу талууд нь таньд таатай байдлыг мэдрүүлэх болно.

Будаа агшаагчны ерөнхий танилцуулга



Хэмжих
аяга

Будааны
халбага

Жигнүүр

1. Онгойлгогч товчлуур
2. Уур гаргах нүх
3. Таг
4. Илүүдэл ус цуглуулагч
5. Хоол заагч
6. Халуун заагч
7. Хянах товчлуур



Хэрэглэх Заавар

1. Будаа агшаагчтай дагалдаж ирсэн хэмжигч аягаар будааг авна.
2. Будааг хэд хэдэн удаа сайтар угаасны дараа ашиглана уу.
Зөвлөмж: Будаа агшаагчийн дотор саванд будааг угаахыг хориглоно. Хэрвээ доторх давхарга гэмтэх мөн хэлбэрээ алдах эрсдэлтэй.
3. Угаасны дараа будааг саванд хийж тохирох хэмжээгээр усыг хийнэ
4. Дотор савыг их биед хийгээд баруун зүүн тийш эргүүлж халаагч ширмэн дээр зөв суурилсан эсэхийг шалгана.
5. Хоол хийхэд бэлэн болсон үед залгуурыг залгана.
6. Сайтар тагласны дараа "Асаах" товчлуурыг дарахад автоматаар "АГШААХ" горимд шилжин, заагч гэрэл асна. Хэрвээ асаах товчлуурыг дараагүй бол 1-2 минутын дараа "ХАЛУУН" горимд шилжиж, уг горимын заагч гэрэл асна.
7. Будаа агшиж дууссаны дараа автоматаар "ХАЛУУН" горимд шилжиж, уг горимын заагч гэрэл асна.
8. Будаа агшаагчийг хэрэглэж дууссаны дараа цахилгааны эх үүсвэрээс салгаж хадгална уу.

Жигнүүр ашиглах заавар

1. Саванд 0.5л ус хийгээд жигнэхэд тохиромжтой хоол болон ногоог жигнүүрт хийгээд савд байршуулна.

2. Жигнэхэд бэлэн болсон үедээ асаах товчлуурыг дарна. Мөн будаа агшааж байхдаа давхар жигнүүрийг ашиглаж болно.

3. Энэ тохиолдолд жигнэж байгаа хоолны цагийг анхааралтай харах хэрэгтэй.

Зөвлөмж: Жигнэсэн хоолыг жигнүүрээс гаргахдаа халуун уураас болгоомжтой байгаарай.

Арчилгаа, цэвэрлэгээ

1. Цэвэрлэхээсээ өмнө залгуураас салгаарай.

2. Халуун усаар, угаалгын шингэн, угаагч звелевчеер дотор сав болон тагийгугаана. Нунтаг цэвэрлэгч болон төмөр үрүүл хэрэглэхийг хориглоно.

3. Чийгтэй зөөлөн алчуураар тагны дотор тал, цахилгааны утас, гадна талыг арчина. Зүлгүүр хэрэглэж болохгүй.

Аюулгүйн анхааруулга:

1. Будаа агшаагч нь зөвхөн дотор ашиглагдах зориулалттай.

2. Хэрэглээгүй үедээ үргэлж залгуурыг салгах хэрэгтэй.

3. Будаа агшаагчийг нойтон, тэгш бус газар болон халуун зүйлтэй ойр байрлуулан тавихыг хориглоно.

4. Савны дотор хатуу зүйл хийх, мөн газын плиткан дээр тавихыг хориглоно.

5. Уур гадагшлуулагч дээр алчуур болон ямар нэгэн зүйл тавихыг хориглоно. Энэ нь бүтээгдэхүүний тагны өнгийг өөрчлөх аюултай.

6. Будаа агшаагч ажиллаж байх үед өндөр температуртай халуун уур гарах тул болгоомжтой байх хэрэгтэй.

7. Цахилгааны асуудлаас сэргийлэхийн тулд будаа агшаагчийн их бие, цахилгааны залгуурыг шингэн зүйлд дүрэх болон ойр байлгахыг хориглоно.

8. Залгуурыг шинээр солихдоо зөвхөн албан ёсны итгэмжлэгдсэн засварын төвөөр үйлчлүүлнэ үү.

9. Гэмтсэн будаа агшаагчийг үргэлжлүүлэн ашиглахыг хориглоно.

10. Энэхүү цахилгаан бараа нь гэр ахуй болон үүнтэй төстэй хэрэглээнд хэрэглэгдэнэ. Үүнд:

- Дэлгүүр, Оффис, болон бусад ажлын орчны ажилчдын гал тогоонд:
Фермийн байшингууд

- Зочид буудал, дэн буудал болон бусад орон сууцны төрлийн орчинд

- Хоолны газрын орчин

11 . Цахилгаан барааг цэвэрлэхээсээ өмнө цахилгааны утсыг салгаад хангалттай хөрсөн үед нь цэвэрлэн, цэвэрлэж дуусаад дахин ашиглахдаа бүрэн хатсан үед ашиглана.

12. Зөвхөн тохирох цахилгааны залгуурыг ашиглана уу.

13. Аюулгүй байдлыг нь хариуцаж буй хүнээс хяналт, зааварчилгаа аваагүй л бол энэ төхөөрөмжийг бие бялдар, мэдрэхүйн болон оюуны чадавх муутай хүмүүс (хүүхдүүдийг оролцуулан) ашиглахыг хориглоно.

14. Хүүхдээс хол байлгана уу.

15. Цахилгааны утас болон залгуур эвдэрсэн үед ашиглаж болохгүй.

16. Чийгтэй болон хэт халуун газар хэрэглэж болохгүй.

Анхааруулга: Бүтээгдэхүүний буруу хэрэглээнээс үүдээд гэмтэл гарж болзошгүй.

Гэмтэл ба түүнийг оношлох

Гэмтэл	Шалтгаан	Шийдвэрлэх арга
Халаагч таваг	Будаа агшаагч залгуурт залгагдаагүй.	Хэрвээ зөв залгагдсан бол : унтраалгын товч, залгуурны оролтыг шалгана уу.
Заагч гэрэл асахгүй байх.	Гэрэл эсвэл эсэргүүцэл нь суларсан/эвдэрсэн.	Температур мэдрэгч гэмтсэн.
Халаагч таваг халуун байх.	Утасны холболт салсан.	Тогонд залгагдсан эсэхийг шалгах, тог ирэхийг хүлээх.
	Халаагч таваг гэмтсэн.	Засварын төвд хандана уу
Будаа дутуу болох, эсвэл агшах хугацаа хэт урт байх	Доторх сав хазайсан.	Доторх савыг эргүүлж халаагч тавгийн мэдрэгч ажиллаж байгаа эсэхийг шалгах
	Халаагч таваг, доторх сав хоёрын голд ямар нэг зүйл орсон.	Ус хэрэглэхгүйгээр цэвэрлэх
	Халаагч таваг хэлбэрээ алдсан.	Засварын төвд хандана уу
Хоол хэт болох.	Унтраалгын товч болон түүний тогтоогч нь гэмтсэн	Засварын төвд хандана уу
	Температур мэдрэгч гэмтсэн.	Засварын төвд хандана уу
Автоматаар халахгүй бол.	Температур мэдрэгч гэмтсэн.	Засварын төвд хандана уу